



System start

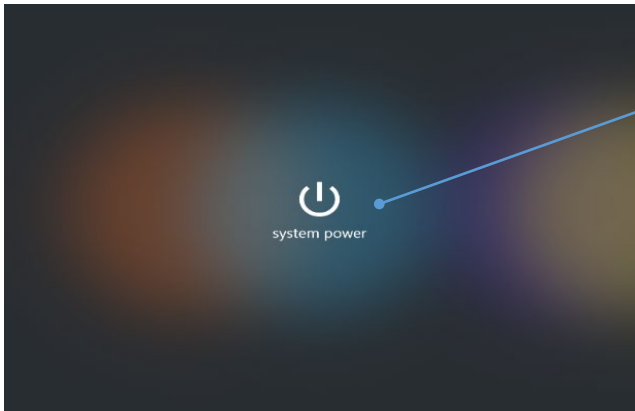

How to turn on the system

Tap the power button. The wait screen will be displayed during the system startup. The main screen will be displayed once system has booted completely.

Home / Main

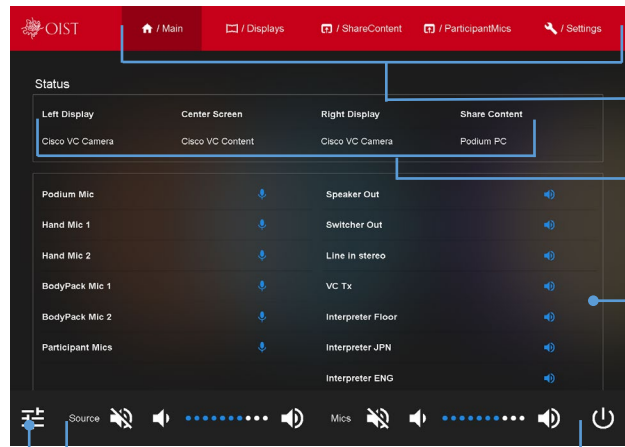

Page switching Volume adjustment

Switch pages with the tabs.

Status of video outputs and shared contents

 
Status of each audio output device

Adjust the source / microphones volume.

Volume control icons: Turn down the volume, Turn up the volume, Mute On / Off (red icon when muted).

Displays the screen for adjusting the volume of all types.

Shutdown system



How to shutdown the system


Tap the power button (power icon) at the bottom of the screen.



The confirmation message will appear on the screen.

Tap Yes to shut down.


Tap No to cancel.

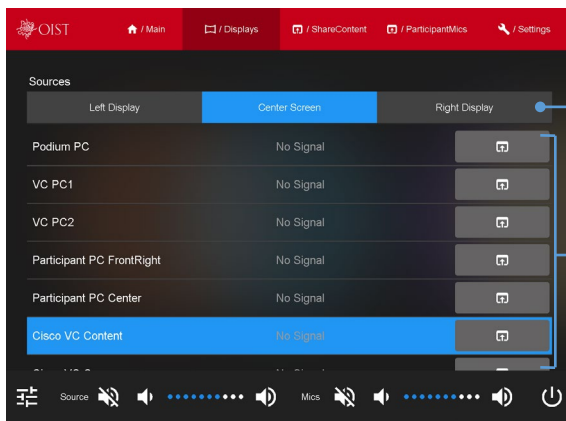


 / Displays

■ Switch the outputting video on Projector / Output

Choose the displaying each device.


Tap  next to the source you wish to display.
(highlighted screen source will change as the display changes)

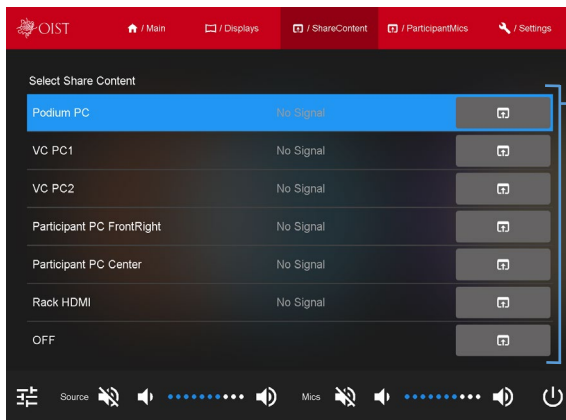

 / ShareContent

■ Switching shared content source during video conference using Cisco

Select the device to share the screen with participants.

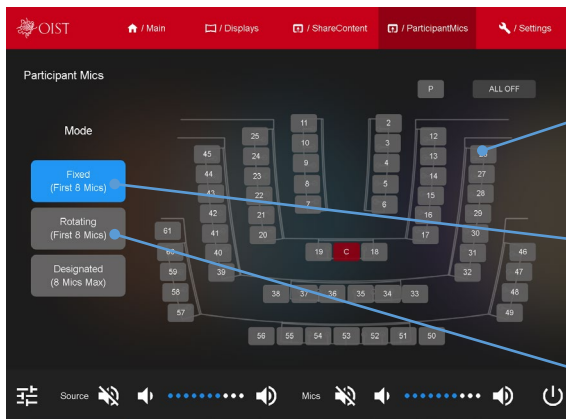

 / ParticipantMics


■ Switching participants microphones

Selecting the button on any seat allows the participant's microphone to be turned On.

<Mode>

Fixed:
The first 8 mics on are available.
When any one of the 8 mics is turned off, the next mic can be used.

Rotating:
When the 9th mic is turned on, the first mic is turned off and the right to speak rotates.

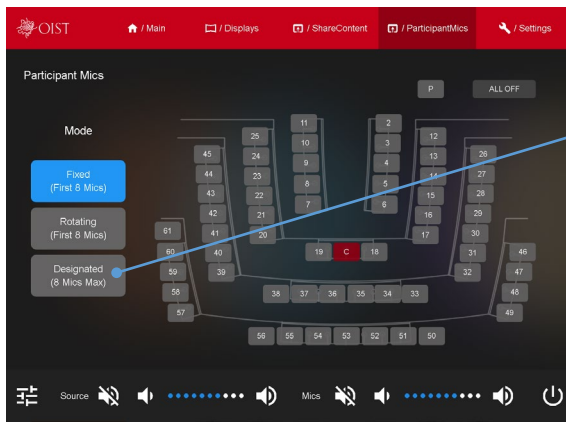


 / ParticipantMics

■ Switching participants microphones

<Mode>

Designated:

Used when the right to speak needs to be authorized by the chair. Mic will blink on press and is activated after chair approval using the touch panel.

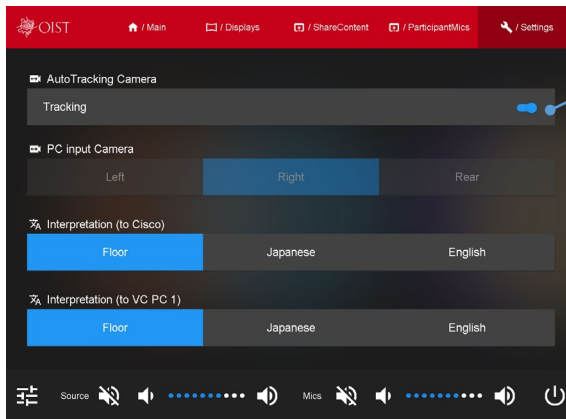


 / Settings

■ Auto Tracking Camera

When this function is enabled, the video conference microphones detect the speaker and automatically switch to the preset camera angle.

***While this function is On, you cannot manually select the camera.**

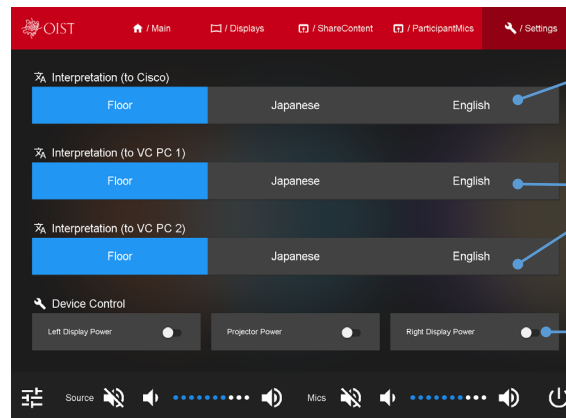

■ How to switch sending the language

Switch the audio sent to the Cisco video conference participants.

Switch the audio sending to the VC PC1/VC PC2.

Controls the power of the displays and projector.