

How to use the Projector in C210

1 STEP ONE

CONFIRM THE AV RACK IS POWERED ON

Press the **POWER** button on the top left of the AV Rack unit.

Please do not press any other switches in the AV Rack.



2 Press the **ON** button on the remote control and tap the touch screen to wake up the system.

3 Connect your HDMI* cable.
*Use the appropriate adapter if necessary.

4 Press the **HDBaseT** button on the remote control.



HDBaseT


Troubleshooting

- **No Image on screen?**
 - Unplug and reconnect the video cable to your laptop, ensuring it is firmly connected.
 - Tap “Share screen” button on the Touch Panel to confirm if PC source was detected.
 - Try HDMI input source on remote. This bypasses the Cisco unit.
 - Try another PC.

AV Equipment Controls

Touch panel AV Equipment controls:

- System Power, Projector power, Screen control
- Ceiling Mic (on/off)
- Individual Mic volumes (if needed)

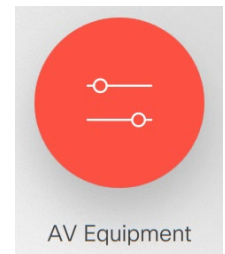

PLEASE DO NOT LEAVE THE SYSTEM/PROJECTOR ON

Press the **STANDBY** button on the remote control to turn off the projector.

Note: System power is also available from the **AV Equipment** menu.