

# How to use the Projector in C700

1 STEP ONE

## CONFIRM THE AV RACK IS POWERED ON

Press the **POWER** (ON/STANDBY) button on the top AV Rack unit.

Please do not change any other settings in the AV Rack.



2 Tap the touch screen to wake up the system, and press **ON** button on the remote control.

3 Connect your PC to the VGA, or HDMI\* cable.  
\*Use the appropriate adapter if necessary.

4 Press the **HDMI** button on the remote control.



➤ Press the Aspect button to change the Image Aspect Ratio, if necessary.

## Troubleshooting

➤ **No sound when using HDMI or VGA?**

- Confirm mini jack is connected to the PC.
- Confirm the **SOURCE** volume level at the rack's mixer.
- Confirm the volume level on the PC, projector remote control, and VC touch panel.

➤ **No Image on screen?**

Confirm "Previewing PC" is shown on the touch screen. If not, press the **Share** icon, then press **PC**.

- Unplug and reconnect the video cable to your laptop, ensuring it is firmly connected.
- Confirm HDMI input source on remote
- Press **OFF**, wait one second, then press **VC** switch on the HDMI switcher at the AV Rack.



## PLEASE DO NOT LEAVE THE PROJECTOR ON

Press the **STANDBY** button on the remote control to turn off the projector.