

How to use the Projector in Conference Center Room 1

1
STEP ONE

CONFIRM THE AV RACK IS POWERED ON

Press the **POWER** (ON/STANDBY) button on the top AV Rack unit.

Please do not change any other settings in the AV Rack.



2 Press the **ON** button on the remote control and tap the touch screen to wake up the system.

Note: Press "DISMISS" in case a green "JOIN MEETING" button shows up, unless you want to connect to other venues via video conferencing.

3 Connect your PC to the VGA, or HDMI* cable.
*Use the appropriate adapter if necessary.

4 Press the **HDMI** button on the remote control.



Troubleshooting


➤ No sound on VGA/HDMI Input?

- Confirm mini jack is connected to the PC.
- Confirm the **SOURCE** volume level at the rack's mixer.
- Confirm the volume level on the PC and VC touch panel.

➤ No Image on screen?

- Confirm "Previewing PC" is shown on the touch screen. If not, press the **Share** icon, then press **PC**.
- Unplug and reconnect the video cable to your laptop, ensuring it is firmly connected.
- Confirm **HDMI** input source on remote.
- Press **OFF**, wait one second, then press **V C** switch on the HDMI switcher at the AV Rack.

Note: Local setting is not currently in use.

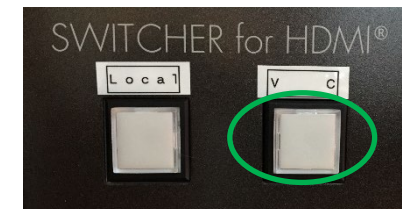

Note: There is a known issue with older Mac's (2012 and older) not being able to connect successfully.

PLEASE DO NOT LEAVE THE PROJECTOR ON

Press the **STANDBY** button on the remote control to turn off the projector.

Contact AV Services at av@oist.jp or 21534, to request assistance or report a fault.