

How to use the Projector in Conference Center Room 2~3

1

Press the **ON** button on the remote control.

2

Tap the touch screen to wake up the system.

Note: Press “DISMISS” in case a green “JOIN MEETING” button shows up, unless you want to connect to other venues via video conferencing.

3

Connect your PC to the VGA, or HDMI* cable.
*Use the appropriate adapter if necessary.

4

Press the **HDMI** button on the remote control.



- Press the Aspect button to change the Image Aspect Ratio, if necessary.

Troubleshooting

- **No Image on screen?**
- Confirm “Previewing PC” is shown on the touch screen. If not, press the **Share** icon, then press **PC**.
 - Unplug and reconnect the video cable to your PC, ensuring it is firmly connected.
 - Confirm HDMI input source on the remote.
- **No sound when using HDMI or VGA?**
- Confirm mini jack is connected to the PC.
 - Confirm the volume level on the PC, projector remote control, and touch screen.



PLEASE DO NOT LEAVE THE PROJECTOR ON

Press the **STANDBY** button on the remote control to turn off the projector.

Contact AV Services at av@oist.jp or 11534, to request assistance or report a fault.