


How to use the Projector in Conference Center Room 4

- 1 Connect your PC to the VGA, or HDMI* cable.
*Use the appropriate adapter if necessary.
 - 2 Press the **ON** button on the remote control.
 - 3 Press the **HDMI** button on the remote control.
- Press the Aspect button to change the Image Aspect Ratio.
 - If your presentation has audio, then you may adjust the volume using the volume controls on the Projector remote control.

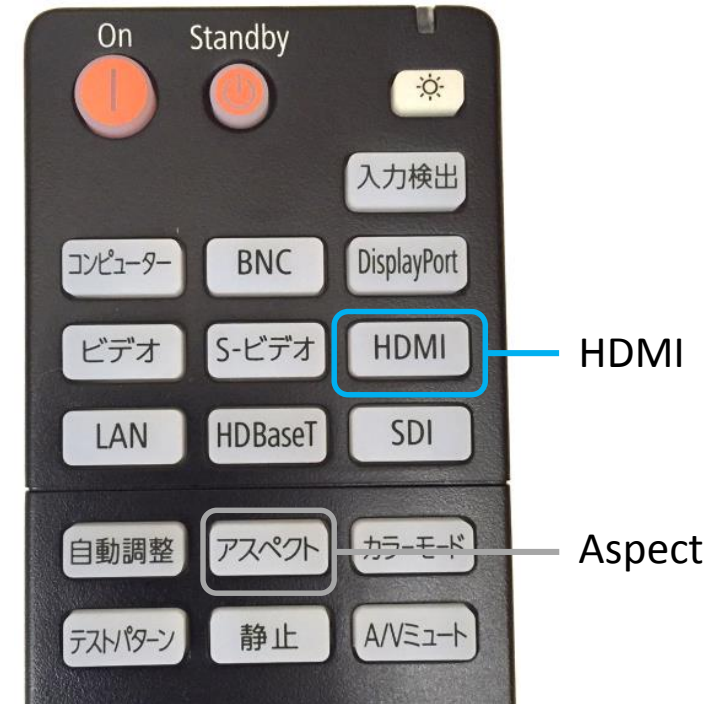

DO NOT LEAVE THE PROJECTOR ON

Press the STANDBY button on the remote control to turn off the projector.

Please do not change any other settings on the projector. If you require custom settings, please restore any changed settings back to the previous state after usage.

Contact AV Services at av@oist.jp or 11534, to request assistance or report a fault.