

How to use the Epson Ceiling Mounted Projector

- 1 Press the **ON** button on the remote control.
- 2 Tap the touch screen to wake up the system.
- 3 Connect your PC to the VGA, or HDMI* cable.
*Use the appropriate adapter if necessary.
- 4 Press the **HDMI** button on the remote control.



- Press the Aspect button to change the Image Aspect Ratio, if needed

Troubleshooting

- **No Image on screen?**
- Confirm "Previewing PC" is shown on the touch screen. If not, press the **Share** icon, then press **PC**.
 - Unplug and reconnect the video cable to your PC, ensuring it is firmly connected.
 - Confirm HDMI input source on the remote.
- **No sound when using HDMI or VGA?**
- Confirm mini jack is connected to the PC.
 - Confirm the volume level on the PC, projector remote control, and touch screen.



PLEASE DO NOT LEAVE THE PROJECTOR ON

Press the **STANDBY** button on the remote control to turn off the projector.

Contact AV Services at av@oist.jp or 21534, to request assistance or report a fault.