

# How to use the Epson Ceiling Mounted Projector

- 1 Tap the touch screen to wake up the system.




- 2 Tap AV Equipment to access projector controls.



AV Equipment

- 3 Toggle projector power on/off and raise/lower screen.

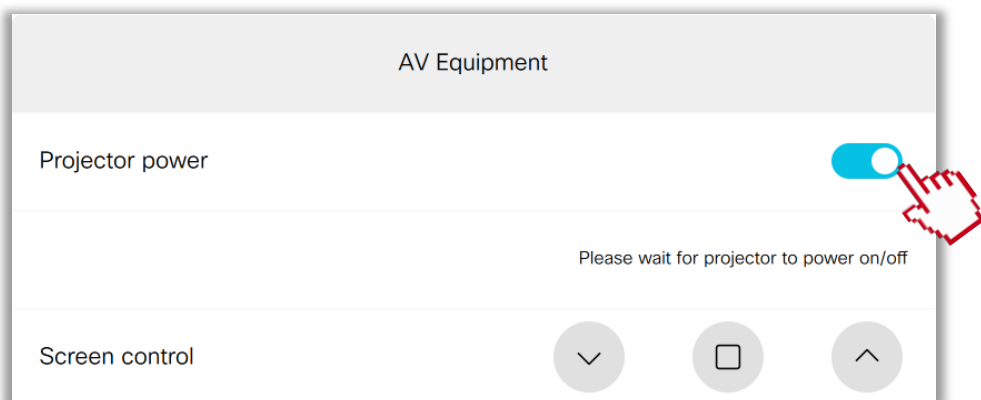

**Note:** Manually raise/lower screen if screen controls are not available.

- 4 Connect your PC to the HDMI cable. Cisco Proximity is also available for wireless screen sharing.

**PLEASE TURN OFF PROJECTOR WHEN DONE**

Contact AV Services at [av@oist.jp](mailto:av@oist.jp) or 21534, to request assistance or report a fault.