



System start

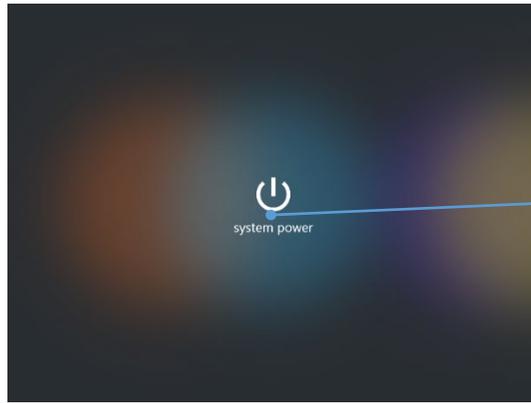

How to turn on the system

- 1 Tap the power button.
The wait screen will be displayed during the system startup.
The main screen will be displayed when system has been booted completely.

Home / Main

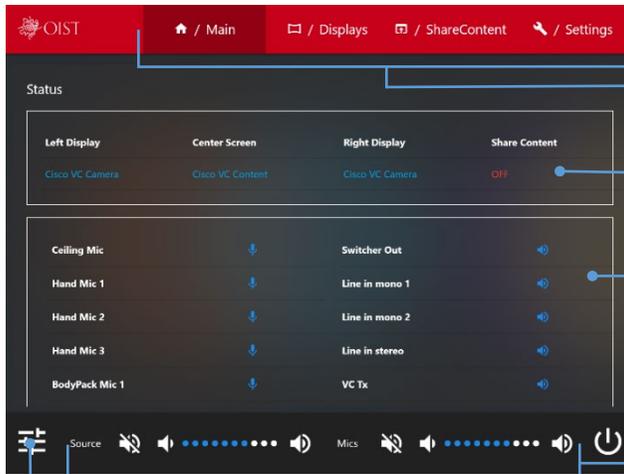

Page switching / Volume adjustment

Displays the screen for adjusting the volume of all types.

Switch pages with the tabs.

You can check the status of video output and shared contents.

You can check status for each audio output device with the icon.

Adjust the source / microphone volume.



Turn up the volume



 
Turn down the volume



Mute on/off: the icon will turn red () while muted.

How to shutdown the system


Shutdown system



- 1 Tap the power button () at the bottom of the screen.




- 2 The confirmation message will appear on the screen.
Tap () to shutdown.
Tap () to cancel.

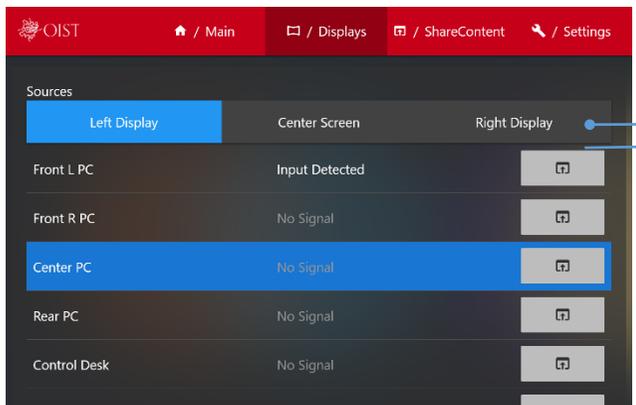

 / Displays

Switch the outputting video on displays / projector


- ① Choose the displaying device.
*The one in blue if there are multiple outputting device setup.
Current outputted screen will be highlighted in blue.
- ② Tap () of the screen source you wish to share.
*Highlighted screen source will change as the display changes.

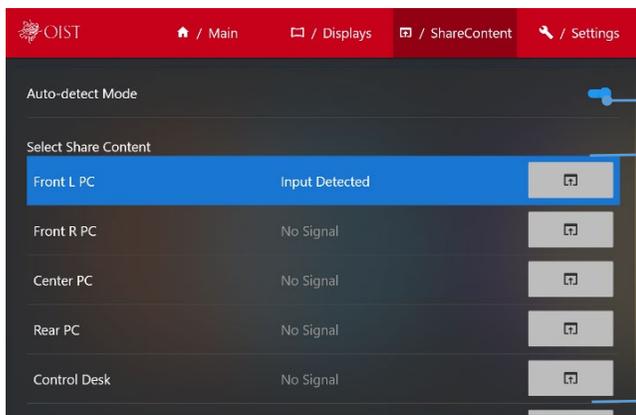

 / ShareContent

Switching the shared content source during the VC with participants.

- Auto-detect Mode**
- ON** : When the system detects a new input, it will show the new input as shared contents automatically.
- OFF** : The user can change the shared contents manually.
- ① Select the device() to share the screen with participants.
* Blue highlight: The video is currently being shared.

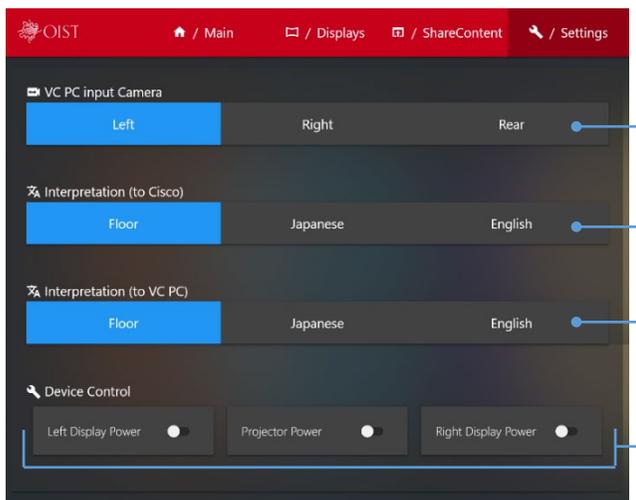

 / Settings

Operate the camera / interpreter system / video equipments

- Switch the camera sending the video to the VC PC.
- Switches the audio sent to Far end of the Cisco video conference.
- Switch the audio sending to the VC PC.
- Controls the power of the displays and projector.