


How to Operate the Backstage Wall, Projector Screen and Baton

A new safety procedure is in effect as of **December 25, 2017**, to operate the Auditorium Backstage Wall, Projector Screen and Baton.



- 1) Turn the control board key to the ON state.
- 2) Power on the control board.
- 3) Enable the projection screen controls.
- 4) Keep pushing the down arrow button to lower the projection screen.
- 5) Remove your finger from the arrow button to stop. Do not lower the screen at a height of approximately 1~1.5 meters from the floor.

To operate the Backstage Wall, **second person is required** to keep pushing the safety switch, which is located on the other side of the backstage wall. The wall will stop moving as soon as one of the switch (the arrow button or the safety switch) is released.

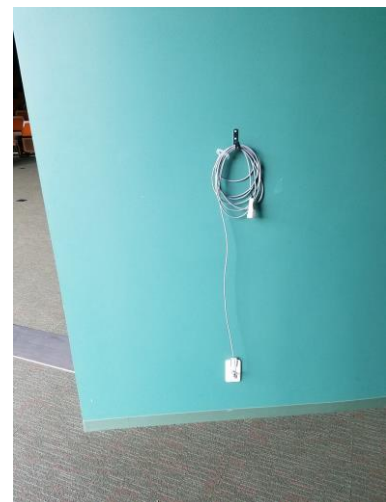

プロジェクター・スクリーン、後背壁、バトンの昇降操作

プロジェクター・スクリーン、後背壁、バトンの昇降操作方法が **2017年12月25日** より変更になりました。



- 1) 吊物機構操作盤のキーを ON 状態の方向に回します。
- 2) 吊物機構操作盤の電源を入れます。
- 3) スクリーンの電源を入れます。
- 4) 矢印のボタンを押し続けてスクリーンを下げます。
- 5) ボタンから指を離すとスクリーンは止まります。床から約 1~1.5m の高さ以下よりも下げないでください。

後背壁を操作するには、後背壁の反対側に設置されている安全スイッチを**もう一人の人が**押し続ける必要があります。矢印ボタンか安全スイッチのいずれかから指を離すと後背壁は止まります。

