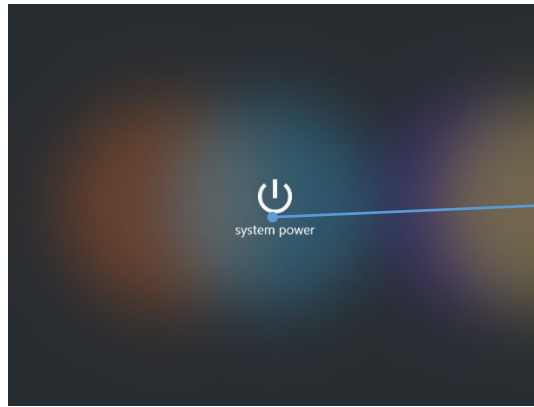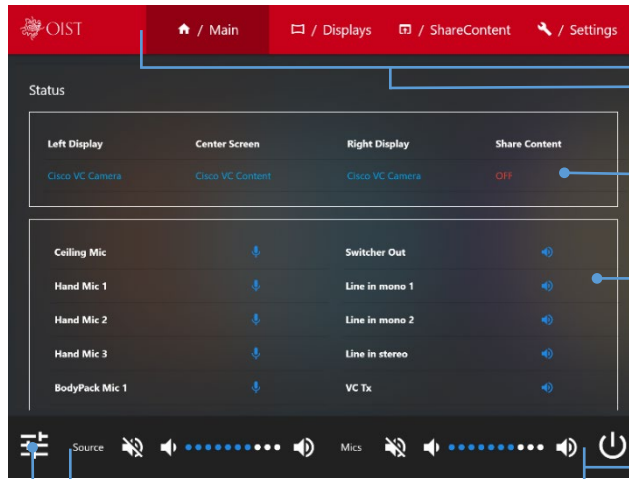## ■ How to turn on the system

System start

① Tap the power button.
The wait screen will be displayed during the system startup.
The main screen will be displayed when system has been booted completely.

■ Page switching / Volume adjustment

↑ / Main

Switch pages with the tabs.

You can check the status of video output and shared contents.

You can check status for each audio output device with the icon.

Adjust the source / microphone volume.

Turn up the volume

Turn down the volume

Displays the screen for adjusting the volume of all types.

Mute on/off: the icon will turn red ( ) while muted.

■ How to shutdown the system

Shutdown system
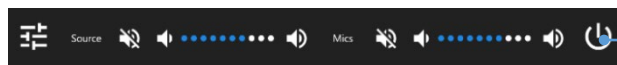
① Tap the power button ( ) at the bottom of the screen.

② The confirmation message will appear on the screen.
Tap ( ) to shutdown.
Tap ( ) to cancel.
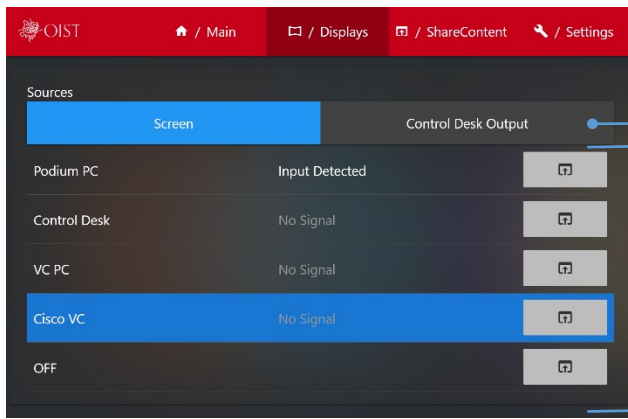
■ **S**witch the outputting video on projector / HDMI output

□ / Displays

Sources

Screen	Control Desk Output

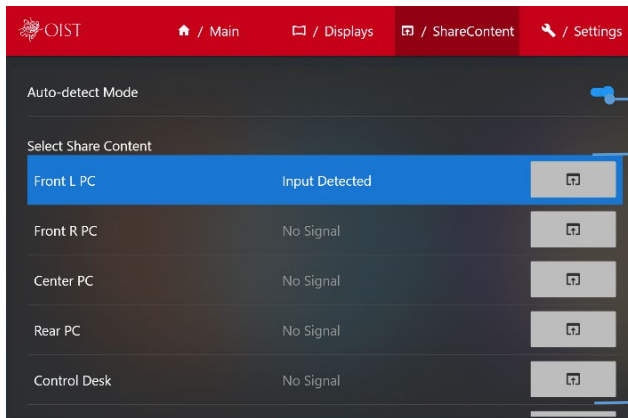| Podium PC | Input Detected | □ |
Control Desk	No Signal	□
VC PC	No Signal	□
Cisco VC	No Signal	□
OFF		□

① Choose the displaying device.
  *The one in blue if there are multiple outputting device setup.
  Current outputted screen will be highlighted in blue.

② Tap (□) of the screen sauce you wish to share.
  *Highlighted screen source will change as the display changes.

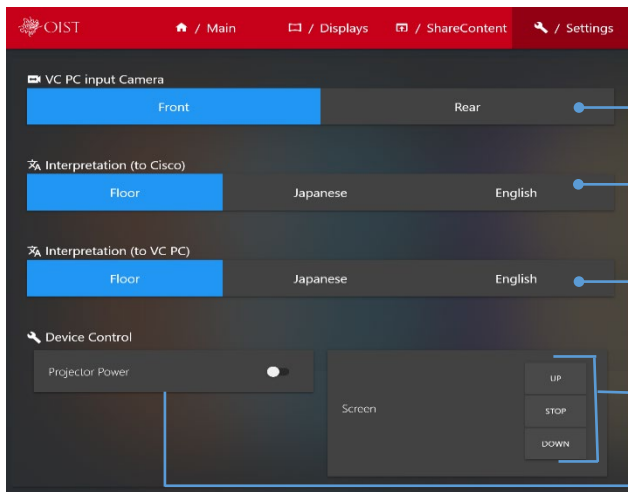## ■ **S**witching the shared content source during the VC with participants.

⊡ / ShareContent

Auto-detect Mode

Select Share Content

Front L PC	Input Detected	□
Front R PC	No Signal	□
Center PC	No Signal	□
Rear PC	No Signal	□
Control Desk	No Signal	□

Auto-detect Mode

ON : When the system detects a new input,
  it will show the new input as shared contents automatically.

OFF : The user can change the shared contents manually.

① Select the device(□) to share the screen with participants.

  * Blue highlight: The video is currently being shared.

■ Operate the camera / interpreter system / video equipments

�? / Settings

🎥 VC PC input Camera

Front	Rear

🔤 Interpretation (to Cisco)

Floor	Japanese	English

🔤 Interpretation (to VC PC)

Floor	Japanese	English

🔧 Device Control

| Projector Power | ● | |

	Screen	UP
		STOP
		DOWN

Switch the camera sending the video to the VC PC.

Switches the audio sent to Far end of the Cisco video conference.

Switch the audio sending to the VC PC.

Controls the screen position.

Controls the power of the displays and projector.